

HARDWIRING ASSEMBLY INSTRUCTIONS FOR Scarlet Flush Mount

Model # 3801-21

3801-21 1.0



BEFORE STARTING- SHUT OFF BREAKER AT MAIN DISCONNECT


Make sure all power is disconnected at existing fixture and that there are no live wires in the junction box.

Not all junction boxes include simple wiring .If you are unsure or have doubts of electrical connection,call an electrician for assembly .

Remove all items from the packaging.


Step 1.

Remove 2 screw(A) from the canopy (C) and bracket(B) as shown.

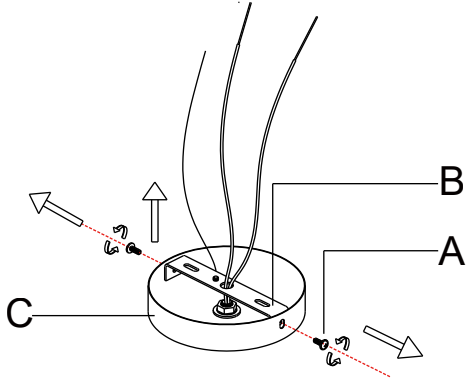

Step 2.

Place bracket(B) to wall. Align hole in bracket(B) with holes in junction box and secure with 2 screws(D) by a phillips head screwdriver. Be sure mounting cross bar is attached tightly to the junction box so the lamp sits sturdy on the wall.

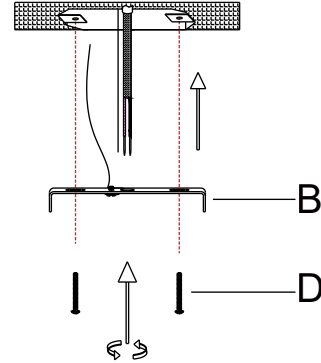


Step 3.

(1) Twist ground wire in your home with green screw(G).

(2) Attach the neutral fixture wire (N) from the canopy(C) to the neutral wire in junction box (usually white).


(3) Attach the hot fixture wire (L) from the canopy (C) to the hot wire in junction box (usually black).

Cover the connected wires with wire nut(E) - tighten each connection by turning clockwise.

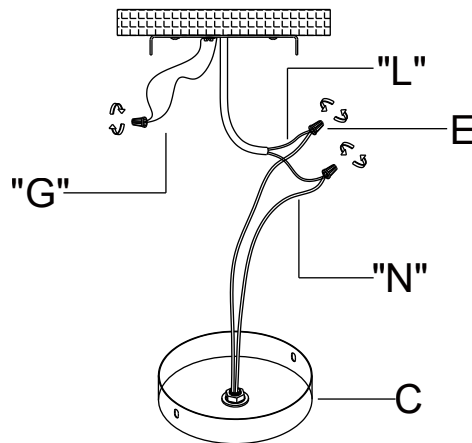

Step 4.

Push up the canopy (C) to cover Bracket(B) properly and fasten with the 2 screws (A) separately to tighten.

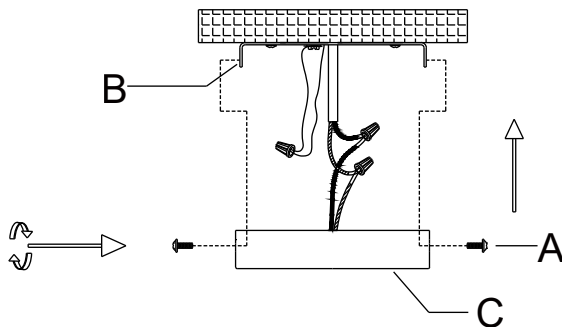

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**


BULB TYPE: (1) 150 watt incandescent or
18 watt LED bulb (not included)

PARTS DIAGRAM:

- (3) Screw (A)
- (3) Wire nut (E)

Step 5.

1. Socket ring (G) comes pre-assembled to the socket. Before assembling the shade, please unscrew this socket ring (G). Set shade (F) onto socket and tighten clockwise with socket ring (G) to secure shade.
2. Screw the bulb(not included) (H) into the socket, put the one of the diffuser point(I1) into the bottom shade ring, then put the rest diffuser point(I2)(I3) into the shade to completed the flush mount.(See the below diffusers instruction)

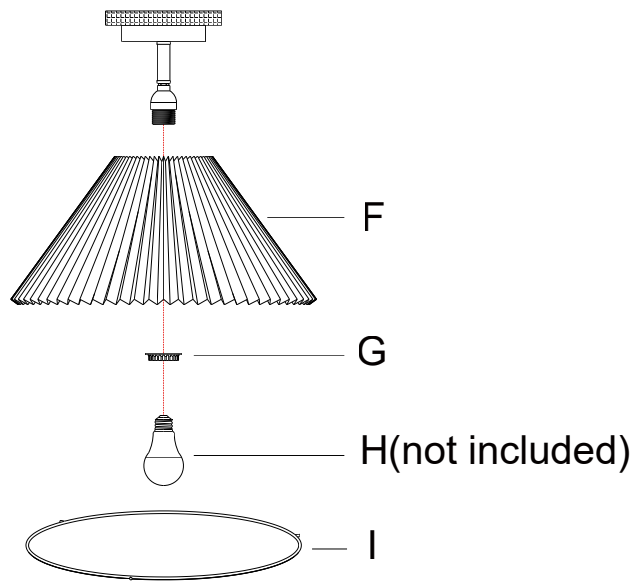

Diffusers Instruction

