CRYSTORAMA LIGHTING

Crystorama.com

ASSEMBLY INSTRUCTION MODEL #5021-AW-CL-MWP

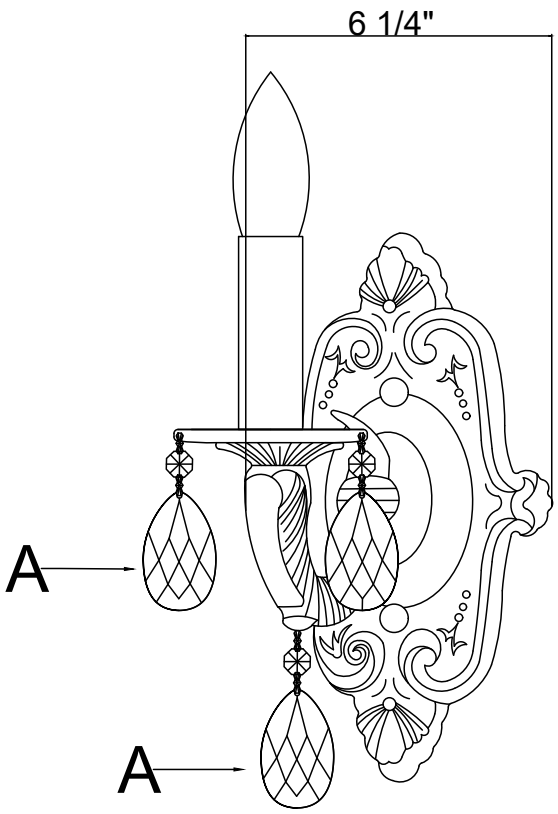

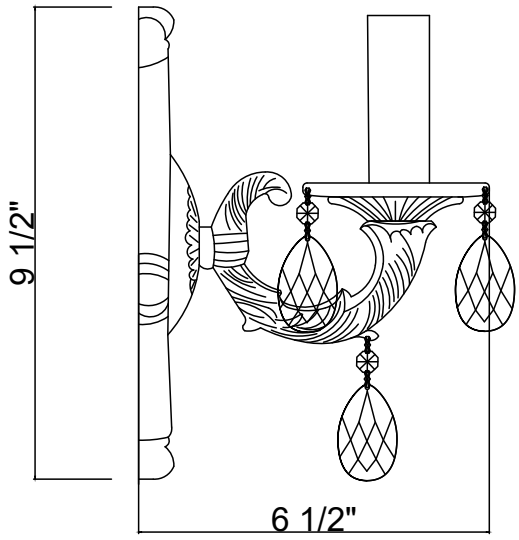

WARNING:



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 1- Candelabra Base Bulb
40 Watts recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE

The fixture is Damp rated

HOW TO INSTALL:

Place the fixture parts on a soft cloth-covered platform before installation of fixture.

1. Install the crossbar onto the outlet box.
2. Place the backplate over the crossbar and secure with the ball nuts.
3. Place the Metal candle sleeve over the socket.
4. Dress the crystals as illustrated.

Crystal Sets

A. 5Sets. (1)14mm+(1)AS9-1.5"

⚠ WARNING:This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm.For more information go to www.p65warnings.ca.gov

CRYSTORAMA LIGHTING

Crystorama.com

ASSEMBLY INSTRUCTION MODEL #5021-AW-CL-MWP

Part Number

Part Numbers

A. (1)-Mounting hardware
   Crossbar x1.
   Wire connector x2.
   Hex nut x2.
   Screw x4.

B. (1)-Fixture body kit
   Backplate x1 ; W6 1/2",H9 1/2".
   3.5"Arm x1.
   Ø3 1/8" Bobeche x1 ; 4pin,10.3mm center hole.
   -XSN5021AWBOB3.375IN

C. (1)-Metal candle sleeve ; H3 1/4"-XSN5021AWCDL3.25IN

D. (1)-White PVC candle sleeve-XSN5021WHCDL3.25IN

E. (2)-Ball nut

